


## CORN COB HOLDER KIT

### REQUIRED ACCESSORIES:

- 1/2" Drill Bit
- Heavy Duty Live Center
- 2 Part Epoxy or Insta Cure (Cyanoacrylate) Glue

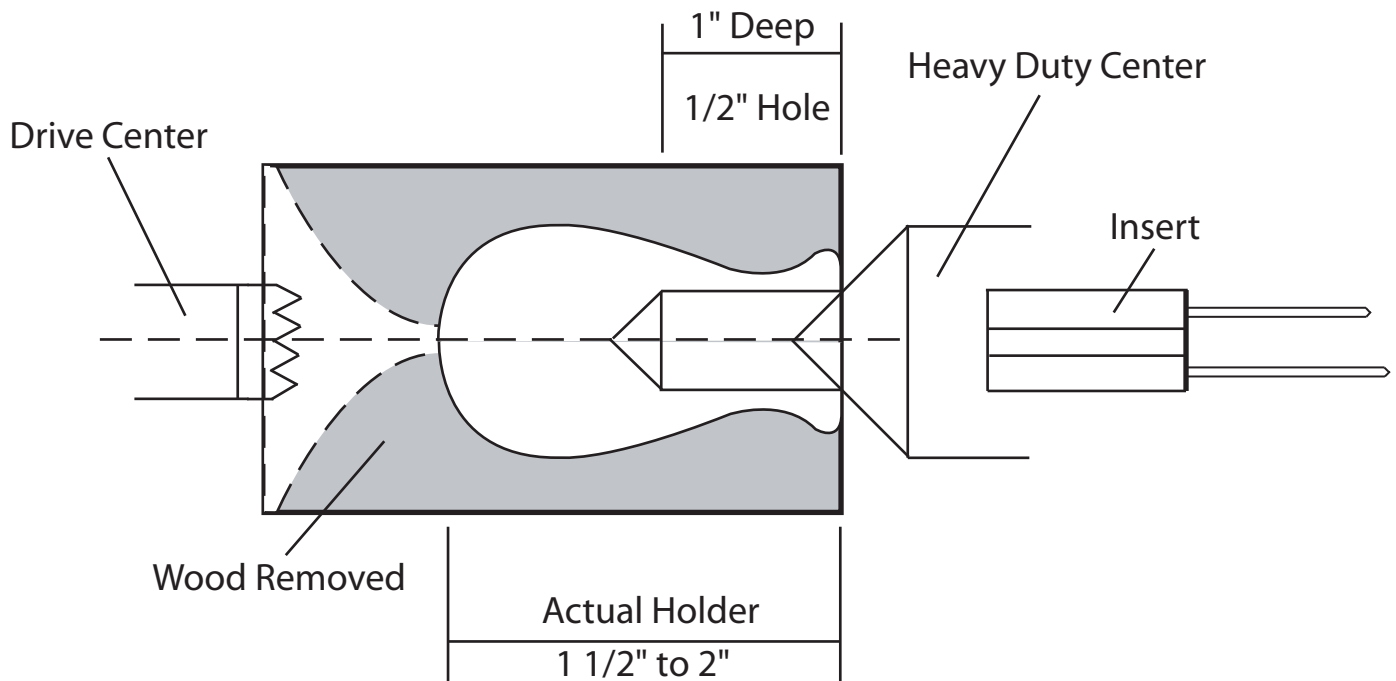

### ASSEMBLY:

- Prepare a blank 1 1/2" x 1 1/2" x 3" long. Mark the center on both ends.
- Drill a 1/2" hole, 1" deep into one end of the blank.
- Mount the blank over the lathe. Use a heavy duty live center and a drive center.
- Turn the blank to the profile of your choice to create the handle. Leave a small bridge, about 1/8" to hold the wood for sanding and finishing.
- When done, separate the handle and finish the end by hand. Sand smooth.
- Squeeze drops of glue into the hole and push the insert inside to the bottom. Be careful not to clog the 2 slots.
- Turn a similar handle and use them as a pair. The pair will nest together for storage.