### **#PKDRAXX**

### **PSI Woodworking Products**

# **Dragon Twist Pen Kit**

### **Kit Features:**


- · Easy to turn with straight tubes
- Minimum parts easy to assemble
- Available in multiple finishes
- Uses Parker® style refills
- Overall Length: 5-7/8"

### **Required Accessories:**

- 7mm Pen Mandrel
- Drill Bit:#PKEXEC-38
- Bushing set(3 pc): #PKDRABU
- Barrel Trimming set: #PKTRIM38
- Live Tailstock Center
- · 2 Part Epoxy Glue or Insta Cure (Cyanoacrylate) Glue
- Pen Blank: Minimum Size 3/4" x 3-1/2"

### DIAGRAM A / PARTS LAYOUT

## (Note: DO NOT press directly against threads) see assembly instructions

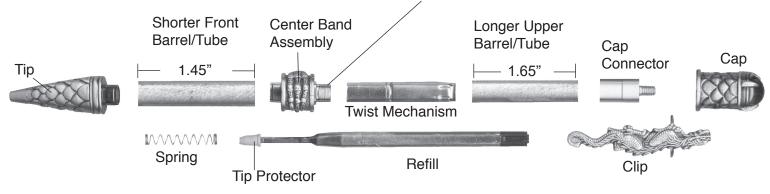


### **Preparing the Blank:**

- Cut 2 blanks to the length of the tube(s) and add 1/16" for squaring off.
- Drill 3/8" holes lengthwise through the blanks.
- Spread glue over the tube(s), insert the blank with a twisting motion to spread the glue evenly inside.
- Center the tubes lengthwise inside the blanks.

• When the glue is dry, square the ends of the blanks. Use a 3/8" barrel trimmer, or a universal pen blank squaring jig with a power disc sander. Take the excess material down flush with the ends of the brass tube. (do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly). Use a barrel trimmer to clean the inside of the tube.



### **DIAGRAM B / TURNING THE BLANKS**

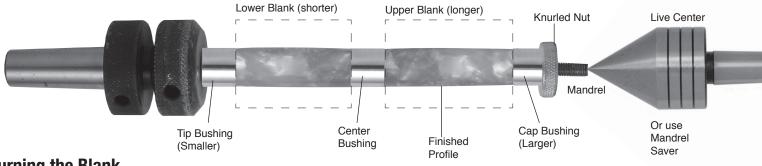

### **Turning the Blank**

- Mount the bushings and blanks according to diagram B.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure. Refer to polish instructions.

### Assembly

- · Layout parts according to diagram A
- Press the tip into either end of the shorter barrel.
- · Press the center band assembly into the opposite end of the barrel.

**WARNING:** It is not advised to press directly over the threads, instead use a pen blank. Cut a section 5/8" long. Drill an 8mm hole through. Affix this blank over the threads and press the band and coupler in.

- Remove the tip protector, affix the spring over the refill and drop into the opening at the band. Screw on the mechanism over.
- Press the cap connector into the larger diameter end of the upper (longer) barrel, flush with the shoulder.
- Affix the clip into the threaded stem. Screw on the cap.
- Engage both ends to close the gap. Twist the upper cap so the clip aligns with the band as shown in the photo of the finished pen.
- The pen operates by twisting the ends to advance or retract the refill.
- Replace the refill by unscrewing the upper barrel from the mechanism & exposing the top of the refill to replace.

### Diagram C / Bushings #PKDRABU

