
## **#PKGCALL5**

#### **PSI Woodworking Products**

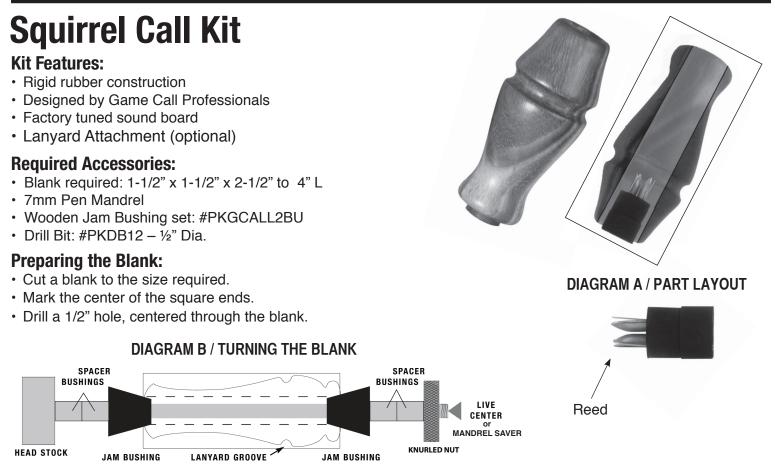

# **Turning the Blank**

- Mount spacer bushing and a jam bushing, wide end in first. Insert the blank and the remaining jam bushing narrow end in. Follow with spacer bushings. (see Diagram B)
- Use either a mandrel saver or a knurled nut to lock into place.
- Turn the wood blank down to the profile of your choice.
- · Cut a groove to attach the lanyard cord.
- Sand and finish. Use penetrating oil for wood, or One-Step<sup>™</sup> plastic polish for acrylics.

# Assembly


- Insert the reed assembly, (reed side in first) into the center hole in the blank. Push inside tube until tight.
- Attach the lanyard cord into the groove.

# **Tips & Techniques**

- Emulate the chatter of a tree squirrel to move them towards your location and attract their predators.
- This call is perfect for calling bobcat, lynx, and other predatory animals that hunt squirrels and birds.
- · Simply puff small breaths of air and flick your tongue at the same time.

### DIAGRAM C / BUSHINGS





.250 Hole