


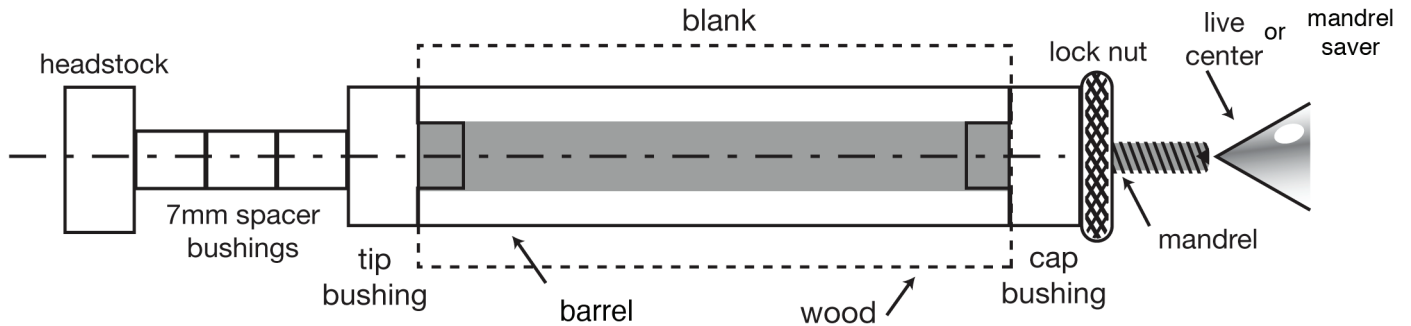

### DIAGRAM B • Turning the blank




### Turning the Blank

Place 7mm spacer bushings onto the mandrel, followed by tip bushings, wide end in first. Place the barrel over the bushing. Slide on the cap bushing, narrow end first. Add spacer bushings as necessary. Thread on the lock nut; hand tight over the mandrel shaft. Bring the tailstock snug to the mandrel and lock it in place. Tighten the lock nut for turning. Do not over tighten the nut, it could damage the mandrel. Turn the wood down in a straight profile and sand to the bushing diameter. Finish the wood with your choice of polish.

### Assembly

- Layout parts according to diagram A
- Press the clip assembly into the top of the barrel
- Insert the 3 part plastic mechanism, threaded end in first into the bottom of the barrel. Follow with support tube.
- Press the front end into the barrel after the support tube.
- Insert the refill, black end in first into the opening then insert the refill spring over refill. Thread the tip over the refill until it bottoms.
- Insert the mechanism spring into the opening at the top of the pen. Insert the plunger, opened end first and thread over the plastic threads until tight.
- Thread the upper nut and tighten.
- Operate the pen by clicking on the plunger.

### DIAGRAM D • PKGDPENBU

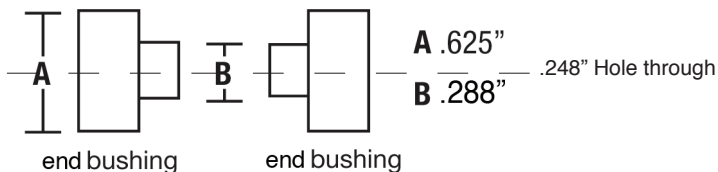

### #PKGDJRBU

