

Assembly Instructions for the Pool Cue Pen Inlay Kit (Design B)


(PSI Pool Cue Pen Kit) Item #WXCUB10

We're going to start by making sure all pieces are included and none are broken. If there are any missing or broken pieces, call or e-mail Ken at (702) 523-9236 or kallenshaan@cox.net to get replacements. Even if you didn't purchase your inlay kit directly from Kallenshaan Woods, use this contact info as our vendors don't carry replacement parts. Also, if a piece doesn't seem to fit well, use this contact info for a replacement or solution. Don't glue in a piece if it doesn't look right.

There is a total of 10 pieces in the upper barrel inlay part of this kit. Insert the brass tube from your PSI Pool Cue Pen Kit into the Cocobolo barrel (Piece #1). Don't glue at this time. This will help align the pieces as they are positioned in the blank. Insert the 3 black diamonds (#2) with the Mother of Pearl inserts in place. Secure this with the supplied elastic bands. Now slide piece #3 into position. Try all different positions as there's only one perfect fit. Do the same for the Curly Maple piece (#4) section on the end. Last piece is the cap #5.

Once all pieces are in place carefully remove the brass tube and while tightly pressing the blank together with the thumb and forefinger of your left hand, brush thin CA glue on all of the seams using a disposable artists paint brush. Don't worry about the elastic bands as they can be removed later while turning.

Drill out the lower barrel curly maple blank using an 8mm drill bit.

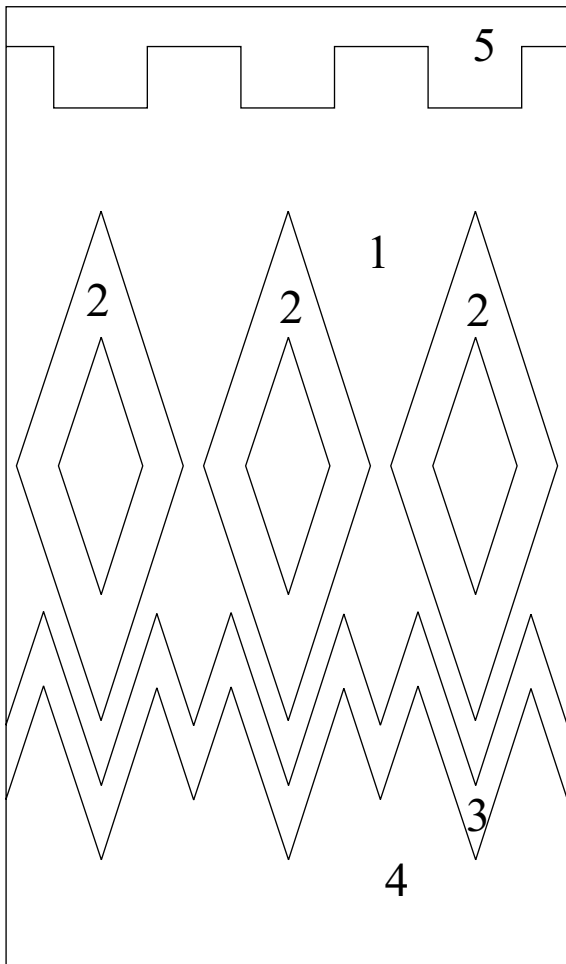

If you're using this inlay kit with a 2 barrel pen kit you'll have to decide where to cut the blank for the best look. I've included two 1/8"

Cocobolo trim rings (#6) to assist you in getting a finished look. These will work best if you use



them on both sides of the pen kits center band on a two barrel kit. They will also clean up the look if you have to cut into the design for a single barrel pen kit. The use of a short blank from a matching or complimentary color would also work well for the lower barrel of a longer 2 barrel pen kit. Lots of options here.

Now we'll glue the brass tubes into the blanks. Check the fit of the tubes as you might have to sand the inside of the blanks for a good fit. If you do, wrap a small dowel with 100G sandpaper and sand the inside of the barrels until the tubes fits smoothly. Use 2-part epoxy to glue in the brass tubes. Once the glue has cured sand the ends flush with the brass tube using a belt or disc sander. Don't use a barrel trimmer for this. Now you can mount the blanks on the lathe for final turning and finishing. Apply whatever finish you're comfortable with as they all work well with these inlay kits.

