


# Good Luck Kit Instructions

For PSI Kits - WXLAZ057 , WXLAZ058 , WZLAZ0538

## Kit components

1 x Barrel with laser cutout

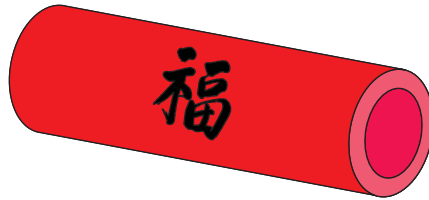

## Products needed :

- 1: Spackle ( Drywall ) or 5 min Epoxy
  - 2: Black Dye to tint Spackle or Epoxy
  - 3: Thin Ca Glue
- Black wood dust can also be used for filling

## Step 1:

Remove all components from the plastic container and place on a clean work surface.

## Step 2:

Mix the Spackle/ Epoxy with the black dye until you are satisfied with the color.

- Spackle - 1: If you are using Spackle let it dry slightly before you fill the engraved area, this will prevent the black dye from bleeding into the red barrel.
- 2: Let the Spackle dry completely and then sand it flat by using a small block and sandpaper.
  - 3: Use thin Ca Glue and saturate the filled area.

- Epoxy - 1: Fill the engraved area and let it dry.
- 2: Sand the epoxy flat with a small block and sandpaper.

## Step 3

Now you can trim / cut / sand the barrel to size and glue the brass tube into the barrel with a glue of your choice and please give it enough time to dry before turning the barrel into shape. Try to sand the barrel round and smooth before you use a skew or any other tool to finish your pen.