


10 mm Pen Disassembler Tool

For "Traditional", "Classic" & "Big Ben" Cigar pens from PSI Woodworking

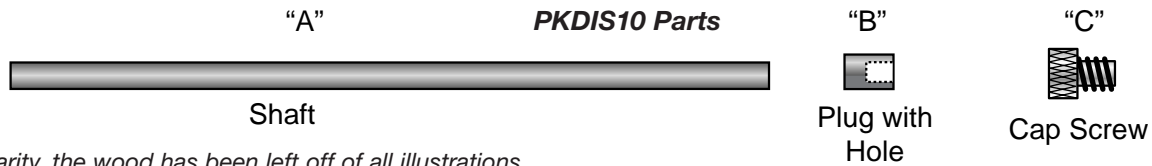

NOTE: For clarity, the wood has been left off of all illustrations

Disassembling PSI 10 mm pens: "Traditional" and "Classic"

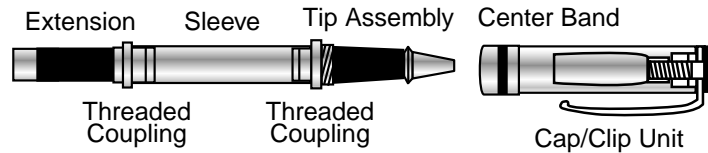


figure 1 - "Classic" cap on back

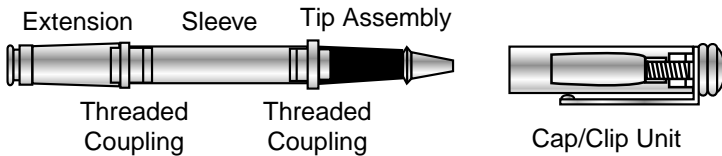


figure 2 - "Traditional" cap on back

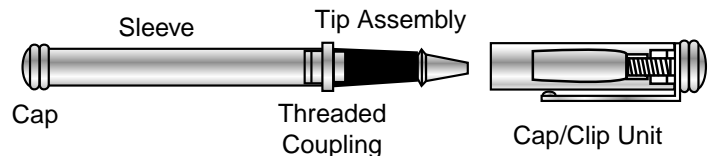


figure 3 - "Traditional" no cap on back

- 1) Unscrew the tip assembly (rollerball or nib), and remove the ink supply and the spring.
- 2) For our "Classic" pens, and our "Traditional" styles (Figures 1 & 2) with the cap on the back, unscrew the extension piece and continue with step 4 below.

- 3) For the "Traditional" pens without the cap held on the back (Figure 3), insert the Shaft "A" through the threaded coupling of the pen body, until it butts up to the cap (Figure 4). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the cap.

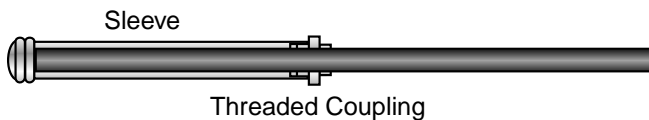


figure 4

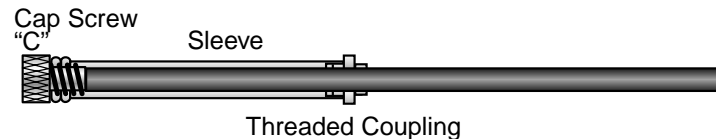


figure 5




figure 6

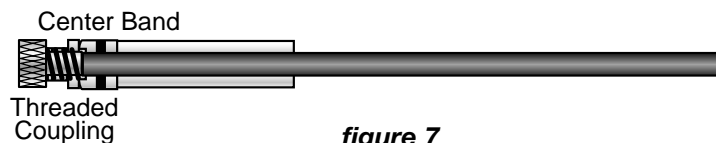


figure 7

- 4) Twist the Cap Screw "C" into either of the threaded couplings. Insert the shaft into the opposite end of the barrel (Figure 5). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the Cap Screw "C" with the threaded coupling. For the pens that hold the cap on the back, remove the threaded coupling from the Cap Screw "C" and repeat this procedure again to remove the second threaded coupling.
- 5) To complete the cap portion, if your pen has one, remove the white plastic retainer using the same process as when you originally built the pen. With the retainer removed, insert Plug "B" so that the screw end of the clip assembly fits into the hole. Insert

- Shaft "A" into the cap body pushing up against the solid end of the plug (Figure 6). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the cap/clip and the plug.
- 6) The remaining center band on certain pens still must be removed. Take one of the threaded couplings from step 4 and screw it into the center band. Next twist the Cap Screw "C" into the center band. Insert the shaft into the opposite end of the barrel (Figure 7). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the Cap Screw with the center band and coupling.

Disassembling PSI 10 mm “Big Ben” Cigar Pen

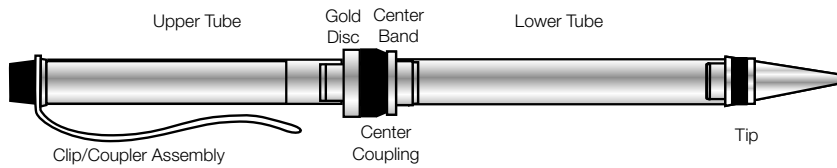


figure 8 - Big Ben Cigar Pen

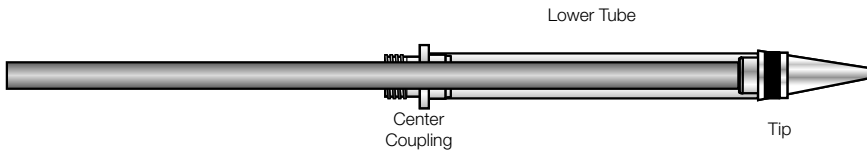


figure 9



figure 10



figure 11



figure 12

- 1) Twist the pen cap off, unscrew the twist mechanism, and remove the ink refill. Set the cap barrel aside.
- 2) Insert the *Shaft "A"* through the threaded coupling of the pen body, until it butts up to the tip (*Figure 9*). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the tip assembly.
- 3) Turn the pen body around and insert the *Plug "B"* into the tube with hole facing inside. Insert *Shaft "A"* into the pen body pushing up against the solid end of the plug (*Figure 10*). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the center coupling and the plug.
- 4) Now take the cap barrel, and insert the disassembly *Shaft "A"* through the center band of the pen cap, until it butts up to the clip/coupling assembly (*Figure 11*). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the clip/coupling assembly.
- 5) Turn the pen cap around and insert *Plug "B"* into the tube with hole facing inside. Insert *Shaft "A"* into the cap body pushing up against the solid end of the plug (*Figure 12*). Hold the barrel tightly in your fist while tapping on the end of the shaft with a hammer. Sharp forceful taps will dislodge the center band and the plug.